



# Bain-marie Showcases

## V9 SERIES

## Use and Maintenance Manual

### **CIAM Spa**

06081 - Petrignano d'Assisi  
PG - Italy  
tel. 075 80161  
Fax 075 8016215  
<http://www.ciamgroup.it>  
e-mail: [info@ciamgroup.it](mailto:info@ciamgroup.it)

## 1. INTRODUCTION

### PRESENTATION

Dear Client,

Ciam S.p.A. is pleased to number you among its customers and relies the bought machine will match your expectation. In order to get the best performances of the machine, we recommend you to follow all suggestions and instructions, which are included in this manual.

### 1.2. HOW TO USE THE MACHINE

#### ■ PERMITTED USES

The showcase cabinet has been manufactured for storage and display of **hot products** in the G/N pans.

#### ■ NOT PERMITTED USES

It is absolutely forbidden the use of the refrigerated display cabinet for **pharmaceutical products**.

### 1.3. RESPECTED NORMS

The refrigerated display cabinet has been manufactured in respect of the safety issues relevant to the following norm:

- **Machinery Directive** N° 2006/42/CE : EC marking for machinery, in place of previous 98/37/EC.
- **Directive** N° 2006/95/CE : Low tension
- **Directive** N° 2004/108/CE : Electro-magnetic Compatibility
- **Norm** CEI 17-13/1 (EN 60439/1) : Realization of Electric Installations
- **Norm** CEI EN 60335-1 (CEI 61-150) : Safety of household and similar electrical appliances
- **UL 197** CAN/CSA C22.2 No 109-M1981 : Standard for commercial electric Cooking Appliance
- **NSF 4** : Standard for commercial electric Cooking Appliance

### 1.4. RESPONSIBILITY

CIAM S.p.A. declines any responsibility relevant to damages on persons, animals and/or products in case of:








- No respect of in force norms
- Installation, which is not conform to the instructions manual
- No observance of all maintenance operations, which are suggested in this manual
- No previously agreed change operations with the manufacturer
- No proper use of the refrigerated display cabinet, for which the machine has been produced.

### 1.5. WARNING

Anytime CIAM S.p.A. reserves the right to up-date the content of this manual and/or to modify the product in order to improve its quality and performance, without any previous notice and/or communication.

## 2. DISPLAY CASE DATA PLATE

### 2.1. DATA PLATE CONTENT

Design & Tecnologia su misura							
<b>Model</b>		1		<b>Production Date</b>			
<b>Serial No.</b>		2		3			
		4 V/ 5 ph / 6 Hz		14		W/A	
		<b>Type</b> 7				15 W	
		<b>No.</b> 8				16 W	
<b>Gas</b> 9		10 Kg		<b>Cl.</b> 11		 17 W	
<b>Pmax</b> 12		psig		<b>Pmin</b> 13		psig	

1. Commercial name of the unit

2. Identification number

3. Production date

4. Voltage

5. Phases

6. Frequency

7. Compressor type

8. Number of compressor

9. Refrigerant type

10. Refrigerant weight

11. Climatic rate (Cl.3 = +25°C/60% U.R.; Cl. 4 = +30°C/55% U.R.)

12. Test pressure – system high pressure side

13. Test pressure – system low pressure side

14. Nominal power/current absorbed during defrost

15. Max. power absorbed during defrost

16. Nominal power absorbed by heating elements (only if higher than 100W)

17. Lighting nominal power

### 3. THECNICAL FEATURES

FEATURES		CB 100	CB 150	CB 200
Dimension	(mm)	See thecnical drawing		
weight	(kg)	132 ÷ 161	169 ÷ 214	198 ÷ 265
Power supply	(V/ph/Hz)	230 / 1 / 50		
Heating element type		Electric, with adhesive resistences		
Working temperature	(°C)	+80		
Max water volume	(liter)	22,5	30	45
Heating element	Type	22RS500A (175x290, 500W) - 22RS1000A (300x400, 1000W)		
	Number x Power (N°xW)	1 x 500 + 1 x 1000	2 x 1000	2 x 500 + 2 x 1000
	Heating element power (W)	1500	2000	3000
Power/current absorbed	(W/A)	1540/7,0	2050/9,3	3100/14,0
Lighting	(W)	1 x 21	1 x 28	2 x 21
Glasses		optional		
Fron glass opening		optional		

### 4. PARAMETER

Parameter	Range	Levell	Value	Unit measure
Set	LS ÷ US (vedi sotto)	---	80	°C
Hy	0,1 ÷ 25,5	Pr1	2	°C
LS	-50 + Set	Pr2	40	°C
US	Set + 110	Pr2	90	°C
Ot	-12 ÷ +12	Pr1	0	°C
Ods	0 ÷ 255	Pr2	0	min.
AC	0 ÷ 30	Pr1	0	min.
CCt	0 ÷ 23h 50min.	Pr2	0	min.
CCS	-50 ÷ +255	Pr2	80	°C
CO n	0 ÷ 255	Pr2	10	min.
COF	0 ÷ 255	Pr2	5	min.
CH	CL = freddo, HT = caldo	Pr2	HT	-
CF	°C ÷ °F	Pr2	°C	-
rES	in = intero , de = decimale	Pr1	in	-
IdF	1 ÷ 120	Pr1	0	ora
MdF	0 ÷ 255	Pr1	0	min.
dFd	rt(temp.reale;it;Set;dEF;dEG	Pr2	rt	-
dAd	0 ÷ 255	Pr2	0	min.
dPO	n(no) ; y (si)	Pr2	n	-
dAF	0 ÷ 23h 50min.	Pr2	0	h,min.
ALC	rE ÷ Ab	Pr2	Ab	-
ALU	-50 ÷ +110	Pr1	+110	°C
ALL	-50 ÷ +110	Pr1	-50	°C
AFH	0,1 ÷ 25,5	Pr2	2	°C
ALd	0 ÷ 255	Pr2	15	min.
dAO	0 ÷ 23h 50min.	Pr2	1.3	h,min.
PbC	Ptc, ntc	Pr2	ntc	-
rEL	---	Pr2	2.0	-
Ptb	---	Pr2	-	-
Prd	Pb1 ÷ Pb2	Pr2	-	-
Pr2	---	Pr1	-	-

## 5. INSTALLATION

### 5.1. MACHINE HANDLING

- The display cabinet handling, from the truck to the final place, has to be made by any truck-lift, which is proper to its weight. The display cabinet shall be always balanced in order to ensure personnel integrity and machine functionality.
- The cabinet can be shipped with or without wood packaging, in case wood crate will be used, will have a pallet base for an easy fork-lift handling. The pallet, however should be handle in the central position
- During the shipment, it is necessary to avoid any crash or/and shake of the display cabinet in order to not damage its frame, especially its glasses.
- Do not drag the display cabinet on the floor and do not push it on the upper glasses.

### 5.2. STOCK OF THE DISPLAY CABINET

- Whenever the cabinet has to be stoked, follow carefully what suggested before.
- Environmental temperature during the cabinet stock can have following range -15°C and + 55°C and humidity between 30% and 90%.
- The display cabinet has always to be protected by sunrays and raining.
- In case the display cabinet has to remain in stock quite long time before its use, keep it with its packaging in order to maintain its protection.

### 5.3. PACKAGING REMOVE

Before getting the display cabinet from the forwarding agent, check its conditions. In case it will be some damages, inform the driver and sign it on shipping documents. **Eventual damages relevant to the shipment and/or to the wrong stock, have not to be ascribed to the manufacturer.**

### 5.4. DISPLAY CABINET POSITION

The refrigerated display cabinet needs particular environmental conditions in order to offer the right performance, so that the area where it will be used has to respect following indications

- Floor has to be levelled perfectly, on the contrary keep the display cabinet on the horizontal position in order to guarantee a perfect defrosting water drain and avoid boring compressor noise.
- The display cabinet has not to be under air currents due to open doors or windows, or under roof ventilators or under air condition outlets. In case will be not respected the above suggestions it can arise an incorrect temperature of the displayed product.
- The display cabinet has not to be placed close any heat source as heaters, ovens, etc.
- The display cabinet has to have a sufficient place in order to ensure a correct custom service, to make an easy maintenance operation, to guarantee the right air flow necessary to make cold the condenser. Besides the warm air which flows out has to no have any obstacle or to invest other equipments in order to not reduce the correct functions.


### 5.6. ELECTRICAL CONNECTION

- Before proceeding with electrical connection, be sure that the available electric power and tension are what is required on technical label of the cabinet.
- The electric connection has to be made by qualified personnel and following manufacturer's instructions taking into consideration the relevant norms in force.
- The display cabinet has already a general switch, however it is necessary an omni polar switch, with a minimum distance among the contacts of 3mm.
- It is obligatory that the display cabinet will be connected properly with an efficient ground socket.

**WARNING!** A wrong connection may occur always to persons, animals and things, where the manufacturer cannot be considered as responsible.

#### WARNING!

**Before any maintenance operation disconnect the electrical supply of the display cabinet (pic.5.6).**

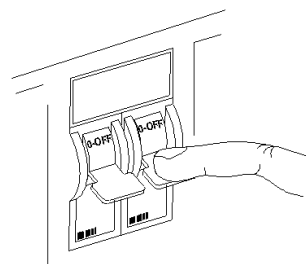


pic.5.6

## 6. ROUTINE MAINTENANCE AND PERIODIC CHECKS

- **These kinds of operations are at client's expenses.**
- In case some malfunctioning of the unit are observed, please make sure this is not due to non-maintenance reasons, before you apply to qualified assistance.
- The accurate and periodic cleaning of the unit will reduce the risk of damages to the unit itself and to the products stored within.
- See following tab for reference.

**ATTENTION !** Before starting any maintenance and cleaning operation make sure you operate on the main switch in order to deactivate tension **(pic. 6)**

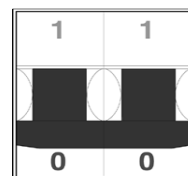

**(pic.6)**

**MAINTENANCE OPERATIONS AND THEIR FREQUENCY. A SUMMARY TAB.**


OPERATION	DESCRIPTION	FREQUENCY
Stainless steel surfaces' cleaning	<ul style="list-style-type: none"> <li>Wash exclusively with warm water and neutral soap; rinse abundantly and wipe off with a soft cloth.</li> <li>Do not use abrasive products</li> </ul>	weekly
Plastic surfaces' cleaning	<ul style="list-style-type: none"> <li>Wash exclusively with warm water and neutral soap; rinse abundantly and wipe off with a soft cloth.</li> <li>Do not use alcohol, acetone and any solvent that might spoil the look and structure of the material.</li> </ul>	weekly
Glass surfaces' cleaning	<ul style="list-style-type: none"> <li>Use only specific products for glass cleaning</li> <li>Using water alone might lead to calcareous deposits on the glass surfaces</li> </ul>	daily
Wooden surfaces' cleaning	<ul style="list-style-type: none"> <li>Use exclusively a wet cloth.</li> </ul>	weekly
<b>ATTENTION! DO NOT CLEAN THE UNIT WITH WATER JETS</b>		

## REFRIGERATION AND ELECTRICAL SYSTEM CABLE CONNECTION GUIDE


<b>AGD</b>	DIGITAL FLAVOURS DISPLAY FEEDER	<b>RES28</b>	FRONT GLASS LOWER FRAME HEATING ELEMENT
<b>AEL</b>	ELECTRONIC BALLAST	<b>RES29</b>	FRONT GLASSES COUPLING PROFILE HEATING ELEMENT
<b>AP</b>	SERVICE VALVE	<b>RES30</b>	DOORS FRAME MIDDLE POST HEATING ELEMENT
<b>CA</b>	SUPPLY CABLE	<b>RES31</b>	GLASSES PERIMETRAL FRAME HEATING ELEMENT
<b>CAR</b>	AIR CONDENSER	<b>RES32</b>	HEATED DOORS HEATING ELEMENTS
<b>CE</b>	ELECTRONIC CONTROL	<b>RES33</b>	WATER DRAIN HEATING ELEMENT
<b>CN</b>	MULTIPOLAR CONNECTOR	<b>RES34</b>	DOORS FRAME HEATING ELEMENT
<b>CO</b>	COMPRESSOR	<b>RES35</b>	COMPRESSOR CRANKCASE HEATING ELEMENT
<b>D</b>	DIOD	<b>RES36</b>	FRONT GLASS FRAME HEATING ELEMENT
<b>DEV</b>	SHUNT	<b>REV</b>	CONDENSER FAN SPEED CONTROL
<b>EM</b>	PHOTOCELL EMITTER	<b>REVC</b>	CONDENSER FAN RELAY
<b>EV</b>	EVAPORATOR	<b>RI</b>	REFRIGERANT TAP
<b>F</b>	FUSE	<b>RIC</b>	COMPRESSOR DELAYER
<b>FD</b>	FILTER DRIER	<b>RICV</b>	PHOTOCELL RECEIVER
<b>FLU</b>	WATER FLOW SWITCH	<b>RIS</b>	RESERVE , ANTI-FOG HEATER ELEMENT
<b>FR</b>	COMPRESSOR THERMAL PROTECTION	<b>RL</b>	LIQUID RECEIVER
<b>HL</b>	COMPRESSOR ALARM LIGHT	<b>RLA</b>	WATER LEVEL ELECTRONIC CONTROL
<b>I</b>	GENERIC SWITCH	<b>RO</b>	OIL HEATER ELEMENT
<b>IEC</b>	WATER EVAPORATION BIN SWITCH	<b>SAA</b>	ABSENCE OF WATER LIGHT
<b>IGD</b>	DIGITAL FLAVOURS DISPLAY	<b>SC</b>	CONDENSER PROBE
<b>II</b>	LIGHTING SWITCH	<b>SD</b>	TERMINAL BOX
<b>IL</b>	SIGHT GLASS	<b>SDC</b>	COMPRESSOR TERMINAL BOX
<b>IMC</b>	WARM SHELF SWITCH	<b>SE</b>	PROXIMITY SENSOR
<b>INV</b>	INVERTER	<b>SEC</b>	MAIN SWITCH
<b>IR</b>	REFRIGERATION SWITCH	<b>SFV</b>	TANK BOTTOM HEATING COIL
<b>IRP</b>	LIGHT REFRIGERATION SWITCH	<b>SIDG</b>	FLAVOURS DISPLAY DIGITAL SYSTEM
<b>IV</b>	INTERNAL FAN SWITCH	<b>SL</b>	LIQUID SEPARATOR
<b>KM</b>	CONTACTOR	<b>SLA</b>	WATER LEVER PROBE
<b>LF</b>	FRONT LIGHTING	<b>SPC</b>	COMPRESSOR LIGHT
<b>LI</b>	INTERNAL UPPER LIGHTING	<b>SPMC</b>	WARM SHELF LIGHT
<b>LIA</b>	FRONT LIGHTING	<b>SPR</b>	ELECTRIC SUPPLY LIGHT
<b>LIG</b>	FLAVOURS DISPLAY LIGHTING	<b>SPS</b>	DEFROSTING LIGHT
<b>LIP</b>	REAR LIGHTING	<b>SS</b>	DEFROSTING PROBE
<b>MDIG</b>	DIGITAL MODULE FOR FLAVOURS DISPLAY	<b>ST</b>	TEMPERATURE PROBE
<b>MM</b>	SPINNING SHELVES ELECTRIC MOTOR	<b>STR</b>	LIGHTING STARTER
<b>MUC</b>	CONDENSING UNIT ELECTRIC CONNECTIONS	<b>SU</b>	HUMIDITY PROBE
<b>PA</b>	HIGH PRESSURE CONTROL	<b>T</b>	TEMPERATURE CONTROL
<b>PD</b>	HIGH-LOW PRESSURE CONTROL	<b>TI</b>	WINTER THERMOSTAT
<b>PO</b>	WATER PUMP	<b>TC</b>	CAPILLARY TUBE
<b>QE</b>	EXTERNAL ELECTRIC PANEL	<b>TE</b>	TIMER
<b>QF</b>	MAGNETIC-THERMIC SWITCH	<b>TER</b>	THERMOMETER
<b>R</b>	LIGHTING BALLAST	<b>TF</b>	FUSIBLE PLUG
<b>RADD</b>	RECTIFIER	<b>TMC</b>	WARM SHELF THERMOSTAT
<b>RE</b>	GENERIC RELAY	<b>TP</b>	LIGHTING FIXTURES REGRIGERATOR THERMOSTAT
<b>REL</b>	ELECTRONIC BALLAST	<b>TRA</b>	TRANSFORMER
<b>REP</b>	ELECTRONIC CONTROL TEMPERATURE REPEATER	<b>TRC</b>	ELECTRONIC CONTROL TRANSFORMER
<b>RES1</b>	COLD AIR DISCHARGE HEATING ELEMENT	<b>TREV</b>	WATER EVAPORATION HEATER ELEMENT THERMOSTAT
<b>RES2</b>	FRONT PROFILE HEATING ELEMENT	<b>TS</b>	SECURITY THERMOSTAT
<b>RES3</b>	RIGHT/LEFT GLASS HEATING ELEMENT	<b>TVC</b>	CONDENSER FAN THERMOSTAT
<b>RES4</b>	FRONT GLASS HEATING ELEMENT	<b>V</b>	COMPRESSOR FAN / GENERAL USE
<b>RES5</b>	DEFROST HEATING ELEMENT	<b>VC</b>	CONDENSER FAN
<b>RES6</b>	WATER EVAPORATION HATING ELEMENT	<b>VEC</b>	WATER EVAPORATION BIN
<b>RES7</b>	TOP LIGHTING FIXTURE HEATING ELEMENT	<b>VES</b>	EXPANSION VALVE
<b>RES8</b>	LATERAL GLASS SUPPORT HEATING ELEMENT	<b>VI</b>	INTERNAL FAN
<b>RES9</b>	FRONT BAND HEATING ELEMENT	<b>VPA</b>	CONDENSING PRESSURE CONTROL WATER VALVE
<b>RES10</b>	COUPLING BAND HEATING ELEMENT	<b>VR</b>	CHECK VALVE
<b>RES11</b>	SERVICE TOP HEATING ELEMENT	<b>VRA</b>	SUCTION PRESSURE REGULATION VALVE
<b>RES12</b>	UPPER BAND/DOOR FRAME HEATING ELEMENT	<b>VRE</b>	EVAPOTATING PRESSURE REGUTATION VALVE
<b>RES13</b>	HOT DRY/BAIN MARIE DISPLAY HEATING ELEMENT	<b>VS</b>	GENERAL USE SOLENOID VALVE
<b>RES14</b>	ANTI-FOG SUCTION AIR BAND HEATING ELEMENT	<b>VSA</b>	SOLENOID WATER VALVE
<b>RES15</b>	WARM SHELF HEATING ELEMENT	<b>VSAB</b>	BY-PASS SOLENOID WATER VALVE
<b>RES16</b>	SIDE BANDS/ FRONT GLASS HINGE HEATING ELEMENT	<b>VSIC</b>	REVERSING CYCLE SOLENOID VALVE
<b>RES17</b>	DEHUMIDIFICATION HEATING ELEMENT	<b>VSL</b>	LIQUID SOLENOID VALVE
<b>RES18</b>	DEFROSTING WATER DRAIN HEATING ELEMENT	<b>VSS</b>	DEFROSTING SOLENOID VALVE
<b>RES19</b>	RING FRAME HEATING ELEMENT	<b>VT</b>	POWER REGULATOR
<b>RES20</b>	SIDE BAND HEATING ELEMENT	<b>VV</b>	GLASS FAN
<b>RES21</b>	SUCTION AIR GLASS HEATING ELEMENT	<b>X1</b>	CABINET CONNECTIONS
<b>RES22</b>	-	<b>X2</b>	EXTERNAL ELECTRIC PANEL CONNECTIONS
<b>RES23</b>	REAR GLASS HEATING ELEMENT	<b>X3</b>	CONDENSING UNIT CONNECTIONS
<b>RES24</b>	INTERNAL GLASS HEATING ELEMENT		
<b>RES25</b>	FRONT GLASS UPPER FRAME HEATING ELEMENT		
<b>RES26</b>	FRONT GLASS LATERAL/LOWER FRAME HEATING ELEMENT		
<b>RES27</b>	FRONT GLASS LATERAL FRAME HEATING ELEMENT		




Vetrine lunghezza < 2000 mm. - CONTROLLO ELETTRONICO

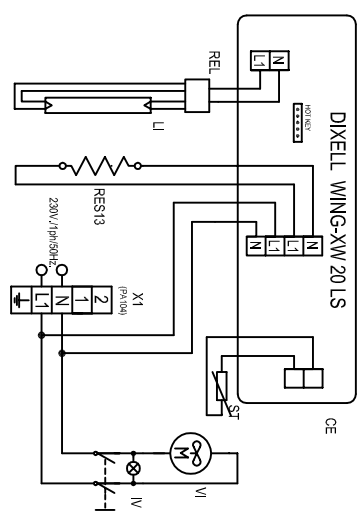

Vetrina lunghezza 2000 mm. - CONTROLLO ELETTRONICO  
Sezione sinistra (da lato operatore)

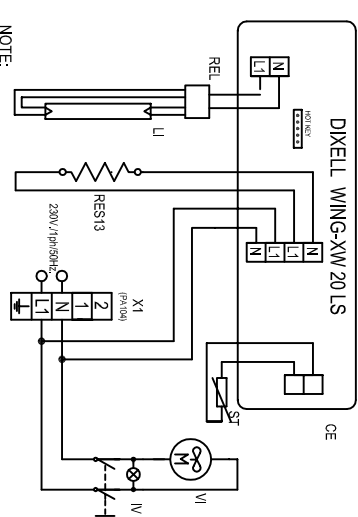


Sezione destra (da lato operatore)

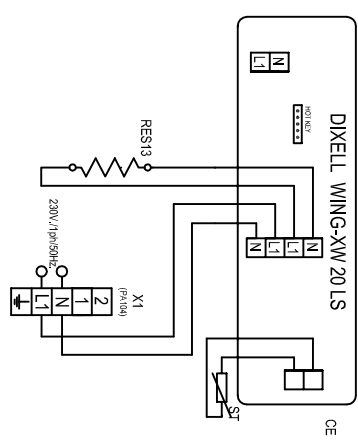


- NOTE:
- La centralina sinistra comanda l'illuminazione unica per tutta la vetrina
  - L'illuminazione può essere accesa anche con centralina sinistra spenta
  - L'interuttore "IV" comanda contemporaneamente i ventilatori di dissipamento di ambedue le sezioni


Vetrine lunghezza < 2000 mm. - CONTROLLO ELETTROMECCANICO

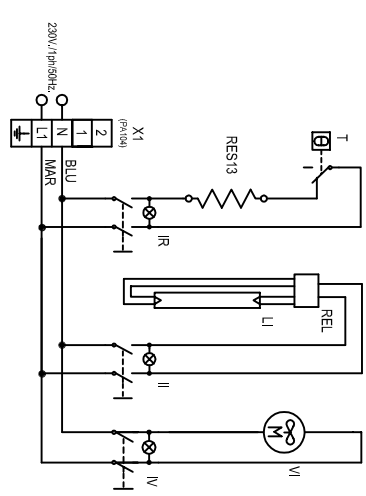

Sezione sinistra (da lato operatore)

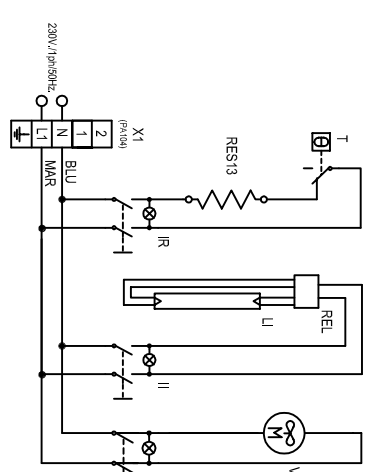

Sezione destra (da lato operatore)

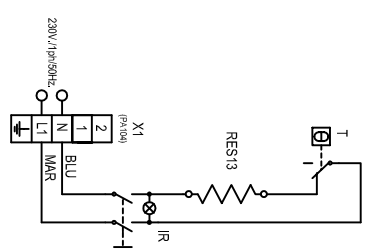

- NOTE:
- L'interuttore "II" (presente nella sezione sinistra) comanda l'illuminazione unica per tutta la vetrina
  - L'interuttore "IV" (presente nella sezione sinistra) comanda contemporaneamente i ventilatori di dissipamento di ambedue le sezioni

ATTENZIONE !


PRIMA DI QUALSIASI INTERVENTO DI MANUTENZIONE TOGLIERE TENSIONE AGENDO SULL'INTERRUTTORE GENERALE OBBLIGATORIAMENTE PRESENTE IN FONITTO.

Design & Tecnologia su misura



Viale Europa 120  
06063 Bastia Umbra  
Perugia - Italy  
Phone 075 80161 Fax 075 8016215  
www.danipgroup.it - mail: tecnico@danipgroup.it

06063 Bastia Umbra  
Perugia - Italy  
Phone 075 80161 Fax 075 8016215  
www.danipgroup.it - mail: tecnico@danipgroup.it



0-6 ±0.06  
6-30 ±0.1  
30-120 ±0.15  
120-315 ±0.2  
315-1000 ±0.3  
1000-2000 ±0.5  
3-6 ±1°  
6-30 e 30°  
30-120 e 20°  
oltre 120 e 10°  
Smussi e Raggi 0.3-0.8

QUOTE SENZA INDICAZIONE DI TOLLERANZA - Grado di precisione medio UNI 5307

Schema elettrico funzionale  
Vetrina calda a bagnomaria Serie V7-V9 CB

DESIGNER Maticci Franco

DATA 28/04/05

P / N




SEF 165-05

FOGLIO

Certified Quality System ISO 9001:2000

TRATT. SUPERFICIALE  
Togliere Bagnature  
Toll. generali vedi tabella

SCALA



MATERIALE

FINITURA

Q.tà

1

20/11/09

Vetrina 2 m.

1

28/04/05

28/04/05

28/04/05

28/04/05

28/04/05

28/04/05

28/04/05

28/04/05

28/04/05

28/04/05

28/04/05

28/04/05

28/04/05

28/04/05

28/04/05

28/04/05

28/04/05

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

## Digital controller with off cycle defrost

### XW20LS

#### 1. GENERAL WARNING

##### 1.1 PLEASE READ BEFORE USING THIS MANUAL

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- The instrument shall not be used for purposes different from those described hereunder. It cannot be used as a safety device.
- Check the application limits before proceeding.

##### 1.2 SAFETY PRECAUTIONS

- Check the supply voltage is correct before connecting the instrument.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to prevent formation of condensation
- Warning: disconnect all electrical connections before any kind of maintenance.
- Fit the probe where it is not accessible by the End User. The instrument must not be opened.
- In case of failure or faulty operation send the instrument back to the distributor or to "Dixell S.p.A." (see address) with a detailed description of the fault.
- Consider the maximum current which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.
- In case of applications in industrial environments, the use of mains filters (our mod. FT1) in parallel with inductive loads could be useful.

#### 2. GENERAL DESCRIPTION

Model **XW20LS**, format 38x185mm, is a digital thermostat with off cycle defrost designed for refrigeration applications at normal temperature. It has 2 relay outputs to control compressor and light... It could be provided with a Real Time Clock which allows programming of up to 6 daily defrost cycles, divided into holidays and workdays. A "Day and Night" function with two different set points is fitted for energy saving. It is also provided with up to 2 NTC or PTC probe inputs, the first one for temperature control, the second one, to be located onto the evaporator and to control the defrost termination temperature. The digital input can operate as third temperature probe, to signal the condenser temperature alarm or to display a temperature.


The HOT KEY output allows to connect the unit, by means of the external module XJ485-CX, to a network line ModBUS-RTU compatible such as the **dixell** monitoring units of X-WEB family. It allows to program the controller by means the HOT KEY programming keyboard.

The instrument is fully configurable through special parameters that can be easily programmed through the keyboard.

#### 3. CONTROLLING LOADS

##### 3.1 COMPRESSOR

The regulation is performed according to the temperature measured by the thermostat probe with a positive differential from the set point: if the temperature increases and reaches set point plus differential the compressor is started and then turned off when the temperature reaches the set point value again.

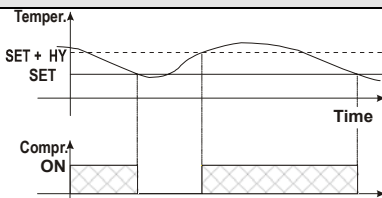

In case of fault in the thermostat probe the start and stop of the compressor are timed through parameters "CO<sub>n</sub>" and "CO<sub>F</sub>".

##### 3.2 DEFROST


Defrost is performed through a simple stop of the compressor. The defrost interval depends on the presence of the RTC (optional). If the RTC is present is controlled by means of parameter "EdF":

- with EdF=In the defrost is made every "IdF" time - standard way for controller without RTC.
- with EdF = "rtc", the defrost is made in real time depending on the hours set in the parameters Ld1...Ld6 on workdays and in Sd1...Sd6 in holidays;

Other parameters are used to control defrost cycles: its maximum length (MdF) and two defrost modes: timed or controlled by the evaporator's probe (P2P).

#### 4. FRONT PANEL COMMANDS

##### 4.1 STANDARD FRONTAL PANEL

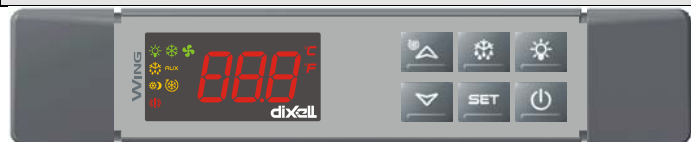

##### 4.2 STEEL FINISHING



**SET**: To display target set point; in programming mode it selects a parameter or confirm an operation.

**(DEF)** To start a manual defrost

**(UP)**: To see the max. stored temperature; in programming mode it browses the parameter codes or increases the displayed value.

**(DOWN)**: To see the min stored temperature; in programming mode it browses the parameter codes or decreases the displayed value.



To switch the instrument off.



To switch the light.

##### KEY COMBINATIONS:

+ To lock & unlock the keyboard.

**SET** + To enter in programming mode.

**SET** + To return to the room temperature display.

#### 4.3 USE OF LEDS

Each LED function is described in the following table.

LED	MODE	FUNCTION
	ON	Compressor enabled
	Flashing	Anti-short cycle delay enabled
	ON	Defrost enabled
	Flashing	Drip time in progress
	ON	An alarm is occurring
	ON	Continuous cycle is running
	ON	Energy saving enabled
	ON	Light on
°C/°F	ON	Measurement unit
°C/°F	Flashing	Programming phase

#### 5. MAX & MIN TEMPERATURE MEMORIZATION

##### 5.1 HOW TO SEE THE MIN TEMPERATURE

1. Press and release the key.
2. The "Lo" message will be displayed followed by the minimum temperature recorded.
3. By pressing the key again or by waiting 5s the normal display will be restored.

##### 5.2 HOW TO SEE THE MAX TEMPERATURE

1. Press and release the key.
2. The "Hi" message will be displayed followed by the maximum temperature recorded.
3. By pressing the key again or by waiting 5s the normal display will be restored.

##### 5.3 HOW TO RESET THE MAX AND MIN TEMPERATURE RECORDED

1. Hold press the SET key for more than 3s, while the max. or min temperature is displayed. (rSt message will be displayed)
2. To confirm the operation the "rSt" message starts blinking and the normal temperature will be displayed.

#### 6. MAIN FUNCTIONS

##### 6.1 TO SET THE CURRENT TIME AND DAY (ONLY FOR INSTRUMENTS WITH RTC)

When the instrument is switched on, it's necessary to program the time and day.

1. Enter the Pr1 programming menu, by pushing the SET + keys for 3s.
2. The rtc parameter is displayed. Push the SET key to enter the real time clock menu.
3. The Hur (hour) parameter is displayed.
4. Push the SET and set current hour by the UP and Down keys, then push SET to confirm the value..
5. Repeat the same operations on the Min (minutes) and dAy (day) parameters.

To exit: Push SET+UP keys or wait for 15 sec without pushing any keys.

##### 6.2 HOW TO SEE THE SET POINT

- SET**
1. Push and immediately release the SET key: the display will show the Set point value;
  2. Push and immediately release the SET key or wait for 5 seconds to display the probe value again.

##### 6.3 HOW TO CHANGE THE SET POINT

1. Push the SET key for more than 2 seconds to change the Set point value;
2. The value of the set point will be displayed and the "°C" or "°F" LED starts blinking;
3. To change the Set value push the or arrows within 10s.
4. To memorise the new set point value push the SET key again or wait 10s.

##### 6.4 HOW TO START A MANUAL DEFROST



Push the DEF key for more than 2 seconds and a manual defrost will start.

##### 6.5 HOW TO CHANGE A PARAMETER VALUE

To change the parameter's value operate as follows:

1. Enter the Programming mode by pressing the Set + keys for 3s (the "°C" or "°F" LED starts blinking).
2. Select the required parameter. Press the "SET" key to display its value



3. Use "UP" or "DOWN" to change its value.
  4. Press "SET" to store the new value and move to the following parameter.
- To exit:** Press **SET** + **UP** or wait 15s without pressing a key.
- NOTE:** the set value is stored even when the procedure is exited by waiting the time-out to expire.

## 6.6 THE HIDDEN MENU

The hidden menu Includes all the parameters of the instrument.

### 6.6.1 HOW TO ENTER THE HIDDEN MENU

1. Enter the Programming mode by pressing the **Set** + **▼** keys for 3s (the "°C" or "°F" LED starts blinking).
  2. Released the keys, then push again the **Set** + **▼** keys for more than 7s. The Pr2 label will be displayed immediately followed from the HY parameter.
- NOW YOU ARE IN THE HIDDEN MENU.**
3. Select the required parameter.
  4. Press the "SET" key to display its value
  5. Use **▲** or **▼** to change its value.
  6. Press "SET" to store the new value and move to the following parameter.

**To exit:** Press **SET** + **▲** or wait 15s without pressing a key.

**NOTE1:** if none parameter is present in Pr1, after 3s the "noP" message is displayed. Keep the keys pushed till the Pr2 message is displayed.

**NOTE2:** the set value is stored even when the procedure is exited by waiting the time-out to expire.

### 6.6.2 HOW TO MOVE A PARAMETER FROM THE HIDDEN MENU TO THE FIRST LEVEL AND VICEVERSA.

Each parameter present in the HIDDEN MENU can be removed or put into "THE FIRST LEVEL" (user level) by pressing "SET + ▼".

In HIDDEN MENU when a parameter is present in First Level the decimal point is on.

## 6.7 HOW TO LOCK THE KEYBOARD

1. Keep pressed for more than 3 s the **UP** + **DOWN** keys.
2. The "POF" message will be displayed and the keyboard will be locked. At this point it will be possible only to see the set point or the MAX o Min temperature stored
3. If a key is pressed more than 3s the "POF" message will be displayed.


## 6.8 TO UNLOCK THE KEYBOARD

Keep pressed together for more than 3s the **▲** and **▼** keys, till the "Pon" message will be displayed.

## 6.9 THE CONTINUOUS CYCLE

When defrost is not in progress, it can be activated by holding the "▲" key pressed for about 3 seconds. The compressor operates to maintain the "ccS" set point for the time set through the "CCt" parameter. The cycle can be terminated before the end of the set time using the same activation key "▲" for 3 seconds.

## 6.10 THE ON/OFF FUNCTION

 With "onF = oFF", pushing the ON/OFF key, the instrument is switched off. The "OFF" message is displayed. In this configuration, the regulation is disabled.

To switch the instrument on, push again the ON/OFF key.

**WARNING:** Loads connected to the normally closed contacts of the relays are always supplied and under voltage, even if the instrument is in stand by mode.

## 7. PARAMETERS

**rtc** Real time clock menu (only for controller with RTC): to set the time and date and defrost start time.

### REGULATION

**Hy Differential:** (0,1 + 25,5°C / 1+255 °F) Intervention differential for set point. Compressor Cut IN is Set Point + differential (Hy). Compressor Cut OUT is when the temperature reaches the set point.

**LS Minimum set point:** (-50°C+SET/-58°F+SET): Sets the minimum value for the set point.

**US Maximum set point:** (SET+110°C/ SET+230°F). Set the maximum value for set point.

**Ot Thermostat probe calibration:** (-12,0+12,0°C; -120+120°F) allows to adjust possible offset of the thermostat probe.

**P2P Evaporator probe presence:** n= not present; y= present:

**OE Evaporator probe calibration:** (-12,0+12,0°C; -120+120°F). allows to adjust possible offset of the evaporator probe.

**P3P Third probe presence (P3):** n= not present; the terminals operate as digital input.; y= present.; the terminals operate as third probe.

**O3 Third probe calibration (P3):** (-12,0+12,0°C; -120+120°F). allows to adjust possible offset of the third probe.

**OdS Outputs activation delay at start up:** (0+255min) This function is enabled at the initial start up of the instrument and inhibits any output activation for the period of time set in the parameter.

**AC Anti-short cycle delay:** (0+50 min) minimum interval between the compressor stop and the following restart.

**rtR Percentage of the second and first probe for regulation (0+100; 100 = P1, 0 = P2):** it allows to set the regulation according to the percentage of the first and second probe, as for the following formula (rtR(P1-P2)/100 + P2).

**CCt Compressor ON time during continuous cycle:** (0,0+24,0h; res. 10min) Allows to set the length of the continuous cycle: compressor stays on without interruption for the CCt time. Can be used, for instance, when the room is filled with new products.

**CCS Set point for continuous cycle:** (-50+150°C) it sets the set point used during the continuous cycle.

**CO n Compressor ON time with faulty probe:** (0+255 min) time during which the compressor is active in case of faulty thermostat probe. With CO n=0 compressor is always OFF.

**COF Compressor OFF time with faulty probe:** (0+255 min) time during which the compressor is OFF in case of faulty thermostat probe. With COF=0 compressor is always active.

**CH Type of action:** CL = cooling; Ht = heating.

### DISPLAY

**CF Temperature measurement unit:** °C=Celsius; °F=Fahrenheit. **WARNING:** When the measurement unit is changed the SET point and the values of the parameters Hy, LS, US, Ot, ALU and ALL have to be checked and modified if necessary).

**rES Resolution (for °C):** (in = 1°C; dE = 0.1 °C) allows decimal point display.

**Lod Instrument display:** (P1; P2, P3, P4, SET, dtr): it selects which probe is displayed by the instrument: **P1** = Thermostat probe; **P2** = Evaporator probe; **P3** = Third probe(only for model with this option enabled); **P4** = NOT SET IT. **SET** = set point; **dtr** = percentage of visualization.

**rEd X- REP display (optional):** (P1; P2, P3, P4, SET, dtr): it selects which probe is displayed by X- REP: **P1** = Thermostat probe; **P2** = Evaporator probe; **P3** = Third probe(only for model with this option enabled); **P4** = NOT SET IT. **SET** = set point; **dtr** = percentage of visualization.

**dLy Display delay:** (0 +20,0m; resul. 10s) when the temperature increases, the display is updated of 1 °C/1 °F after this time.

**dtr Percentage of the second and first probe for visualization when Lod = dtr (0+100; 100 = P1, 0 = P2):** if Lod = dtr it allows to set the visualization according to the percentage of the first and second probe, as for the following formula (dtr(P1-P2)/100 + P2).

### DEFROST

**EdF Defrost mode (only for controller with RTC):** rtc = Real Time Clock mode. Defrost time follows Ld1+Ld6 parameters on workdays and Sd1+Sd6 on holidays.

in = interval mode. The defrost starts when the time "ldf" is expired.

**dFP Probe selection for defrost termination:** nP = no probe; **P1** =thermostat probe; **P2** = evaporator probe; **P3** =configurable probe; **P4** = NOT SET IT.

**dTE Defrost termination temperature:** (-50+50 °C/ -58+122°F) (Enabled only when EdF=Pb) sets the temperature measured by the evaporator probe, which causes the end of defrost.

**ldf Interval between defrost cycles:** (0+120h) Determines the time interval between the beginning of two defrost cycles.

**MdF (Maximum) length for defrost:** (0+255min) When **P2P** = n, (not evaporator probe: timed defrost) it sets the defrost duration, when **P2P** = y (defrost end based on temperature) it sets the maximum length for defrost.

**dFd Temperature displayed during defrost:** (rt = real temperature; it = temperature at defrost start; SET = set point; dEF = "dEF" label)

**dAd MAX display delay after defrost:** (0+255min). Sets the maximum time between the end of defrost and the restarting of the real room temperature display.

### ALARMS

**ALP Probe selection for alarm:** nP = no probe, the temperature alarms are disabled; **P1** = Probe 1 (Thermostat probe); **P2** = Probe 2 (evaporator probe); **P3** = Probe 3 (display probe); **P4** = NOT SET IT.

**ALC Temperature alarms configuration:** (Ab; rE)

Ab= absolute temperature: alarm temperature is given by the ALL or ALU values. rE = temperature alarms are referred to the set point. Temperature alarm is enabled when the temperature exceeds the "SET+ALU" or "SET-ALL" values.

**ALU MAXIMUM temperature alarm:** (SET+110°C; SET+230°F) when this temperature is reached the alarm is enabled, after the "ALd" delay time.

**ALL Minimum temperature alarm:** (-50,0 + SET °C; -58+230°F) when this temperature is reached the alarm is enabled, after the "ALd" delay time.

**AFH Differential for temperature alarm recovery:** (0,1+25,5°C; 1+45°F) Intervention differential for recovery of temperature alarm.

**ALd Temperature alarm delay:** (0+255 min) time interval between the detection of an alarm condition and alarm signalling.

**dAo Exclusion of temperature alarm at start-up:** (from 0.0 min to 23.5h) time interval between the detection of the temperature alarm condition after instrument power on and alarm signalling.

### CONDENSER TEMPERATURE ALARM

**AP2 Probe selection for temperature alarm of condenser:** nP = no probe; **P1** =thermostat probe; **P2** = evaporator probe; **P3** =configurable probe; **P4** = NOT SET IT.

**AL2 Low temperature alarm of condenser:** (-55+150°C) when this temperature is reached the LA2 alarm is signalled, possibly after the Ad2 delay.

**Au2 High temperature alarm of condenser:** (-55+150°C) when this temperature is reached the HA2 alarm is signalled, possibly after the Ad2 delay.

**AH2 Differential for temperature condenser alarm recovery:** (0,1+25,5°C; 1+45°F)

**Ad2 Condenser temperature alarm delay:** (0+255 min) time interval between the detection of the condenser alarm condition and alarm signalling.

**dA2 Condenser temperature alarm exclusion at start up:** (from 0.0 min to 23.5h, res. 10min)

**bLL Compressor off with low temperature alarm of condenser:** n = no: compressor keeps on working; Y = yes, compressor is switched off till the alarm is present, in any case regulation restarts after AC time at minimum.

**AC2 Compressor off with high temperature alarm of condenser:** n = no: compressor keeps on working; Y = yes, compressor is switched off till the alarm is present, in any case regulation restarts after AC time at minimum.

### DIGITAL INPUT

**i1P Digital input polarity:** oP: the digital input is activated by opening the contact; CL: the digital input is activated by closing the contact.

**i1F Digital input configuration:** EAL= external alarm: "EA" message is displayed; bAL= serious alarm "CA" message is displayed. PAL= pressure switch alarm, "CA" message is displayed; dor= door switch function; dEF= activation of a defrost cycle; AUS=not enabled; Htr= kind of action inversion (cooling – heating); FAn= not set it; ES= Energy saving; HdF = Holiday defrost (enable only with RTC); onF = to switch the controller off.

**did (0+255 min) with i1F= EAL or i1F = bAL digital input alarm delay (1-3):** delay between the detection of the external alarm condition and its signalling.

with i1F= dor: door open signalling delay

with i1F= PAL: time for pressure switch function: time interval to calculate the number of the pressure switch activation.

**nPS Pressure switch number:** (0 +15) Number of activation of the pressure switch, during the "did" interval, before signalling the alarm event (i1F= PAL).

If the nPS activation in the did time is reached, switch off and on the instrument to restart normal regulation.

**odc Compressor status when open door:** no, Fan = normal; CP r, F. C = Compressor OFF.

**rrd Outputs restart after doA alarm:** no= outputs not affected by the doA alarm; yES = outputs restart with the doA alarm.

**HES Temperature increase during the Energy Saving cycle:** (-30,0°C+30,0°C) it sets the increasing value of the set point during the Energy Saving cycle.

### TO SET CURRENT TIME AND WEEKLY HOLIDAYS (ONLY FOR MODELS WITH RTC)

**Hur** Current hour (0 + 23 h)

**Min** Current minute (0 + 59min)

<b>dAY</b>	Current day (Sun + Sat)
<b>Hd1</b>	First weekly holiday (Sun + nu) Set the first day of the week which follows the holiday times.
<b>Hd2</b>	Second weekly holiday (Sun + nu) Set the second day of the week which follows the holiday times.
<b>N.B.</b>	Hd1, Hd2 can be set also as "nu" value (Not Used).

#### TO SET ENERGY SAVING TIMES (ONLY FOR MODELS WITH RTC)

<b>ILE</b>	Energy Saving cycle start during workdays: (0 + 23h 50 min.) During the Energy Saving cycle the set point is increased by the value in HES so that the set point is SET + HES.
<b>dLE</b>	Energy Saving cycle length during workdays: (0 + 24h 00 min.) Sets the duration of the Energy Saving cycle on workdays.
<b>ISE</b>	Energy Saving cycle start on holidays: (0 + 23h 50 min.)
<b>dSE</b>	Energy Saving cycle length on holidays (0 + 24h 00 min.)

#### TO SET DEFROST TIMES (ONLY FOR MODELS WITH RTC)

<b>Ld1+Ld6</b>	Workday defrost start (0 + 23h 50 min.) These parameters set the beginning of the 6 programmable defrost cycles during workdays. Ex. When Ld2 = 12.4 the second defrost starts at 12.40 during workdays.
<b>Sd1+Sd6</b>	Holiday defrost start (0 + 23h 50 min.) These parameters set the beginning of the 6 programmable defrost cycles on holidays. Ex. When Sd2 = 3.4 the second defrost starts at 3.40 on holidays.
<b>N.B.</b>	To disable a defrost cycle set it to "nu"(not used). Ex. If Ld6=nu; the sixth defrost cycle is disabled

#### OTHER

<b>Adr</b>	Serial address (1+244): Identifies the instrument address when connected to a ModBUS compatible monitoring system.
<b>PbC</b>	Type of probe: it allows to set the kind of probe used by the instrument: <b>PbC</b> = PBC probe, <b>ntc</b> = NTC probe.
<b>onF</b>	on/off key enabling: nu = disabled; off = enabled; ES = not set it.
<b>dP1</b>	Thermostat probe display
<b>dP2</b>	Evaporator probe display
<b>dP3</b>	Third probe display- optional.
<b>rSE</b>	Real set point: it shows the set point used during the energy saving cycle or during the continuous cycle.
<b>rEL</b>	Software release for internal use.
<b>Ptb</b>	Parameter table code: readable only.

### 8. DIGITAL INPUT (ENABLED ONLY IF P3P = N)

#### 8.1 GENERIC ALARM (i1F = EAL)

As soon as the digital input is activated the unit will wait for "did" time delay before signalling the "EAL" alarm message. The outputs status don't change. The alarm stops just after the digital input is de-activated.

#### 8.2 SERIOUS ALARM MODE (i1F = bAL)

When the digital input is activated, the unit will wait for "did" delay before signalling the "CA" alarm message. The relay outputs are switched OFF. The alarm will stop as soon as the digital input is de-activated.

#### 8.3 PRESSURE SWITCH (i1F = PAL)

If during the interval time set by "did" parameter, the pressure switch has reached the number of activation of the "nPS" parameter, the "CA" pressure alarm message will be displayed. The compressor and the regulation are stopped. When the digital input is ON the compressor is always OFF. If the nPS activation in the did time is reached, switch off and on the instrument to restart normal regulation.

#### 8.4 DOOR SWITCH INPUT (i1F = dor)

It signals the door status and the corresponding relay output status through the "odc" parameter: no, Fan = normal (any change); CPr, F, C = Compressor OFF. Since the door is opened, after the delay time set through parameter "did", the door alarm is enabled, the display shows the message "dA" and the regulation restarts is rtr = yES. The alarm stops as soon as the external digital input is disabled again. With the door open, the high and low temperature alarms are disabled.

#### 8.5 START DEFROST (i1F = dEF)

It starts a defrost if there are the right conditions. After the defrost is finished, the normal regulation will restart only if the digital input is disabled otherwise the instrument will wait until the "MdF" safety time is expired.

#### 8.6 INVERSION OF THE KIND OF ACTION: HEATING-COOLING (i1F = Htr)

This function allows to invert the regulation of the controller: from cooling to heating and viceversa.

#### 8.7 ENERGY SAVING (i1F = ES)

The Energy Saving function allows to change the set point value as the result of the SET+ HES (parameter) sum. This function is enabled until the digital input is activated.

#### 8.8 HOLIDAY DEFROST (i1F = HDF) –ONLY FOR MODELS WITH RTC

This function enabled the holiday defrost setting.

#### 8.9 ON OFF FUNCTION (i1F = onF)

To switch the controller on and off.

#### 8.10 DIGITAL INPUTS POLARITY

The digital input polarity depends on the "i1P" parameter.

i1P =CL: the input is activated by closing the contact.

i1P =OP: the input is activated by opening the contact


### 9. TTL SERIAL LINE – FOR MONITORING SYSTEMS

The TTL serial line, available through the HOT KEY connector, allows by means of the external TTL/RS485 converter, XJ485-CX, to connect the instrument to a monitoring system ModBUS-RTU compatible such as the X-WEB500/3000/300.

### 10. X-REP OUTPUT – OPTIONAL

As optional, an X-REP can be connected to the instrument, through the HOY KEY connector. The X-REP output **EXCLUDES** the serial connection.


To connect the X-REP to the instrument the following connectors must be used CAB-51F(1m), CAB-52F(2m), CAB-55F(5m),




### 11. INSTALLATION AND MOUNTING

The controller XW20LS, shall be mounted on vertical panel, in a 150x31 mm hole, and fixed using two screws Ø 3 x 2mm. To obtain an IP65 protection grade use the front panel rubber gasket (mod. RG-L). The temperature range allowed for correct operation is 0 - 60 °C. Avoid places subject to strong vibrations, corrosive gases, excessive dirt or humidity. The same recommendations apply to probes. Let the air circulate by the cooling holes.

#### 11.1 CUT OUT

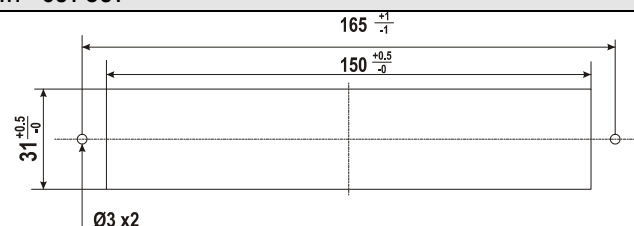

#### 11.2 STEEL FINISHING MOUNTING

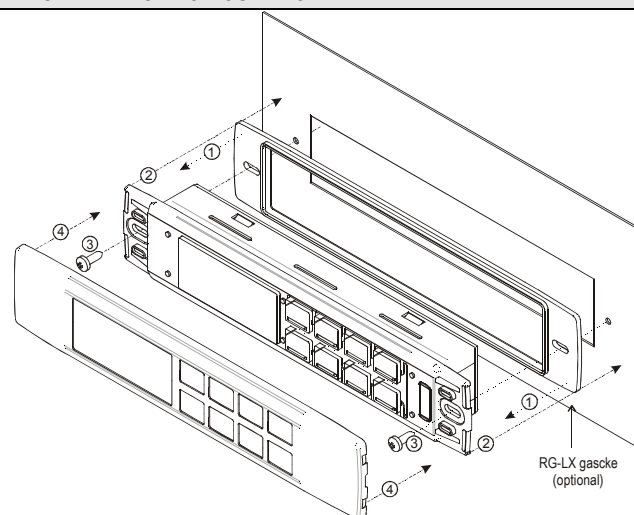

### 12. ELECTRICAL CONNECTIONS

The instruments are provided with screw terminal block to connect cables with a cross section up to 2.5 mm² for the digital and analogue inputs. Relays and power supply have a Faston connection (6,3mm). Heat-resistant cables have to be used. Before connecting cables make sure the power supply complies with the instrument's requirements. Separate the probe cables from the power supply cables, from the outputs and the power connections. Do not exceed the maximum current allowed on each relay, in case of heavier loads use a suitable external relay.

**N.B.** Maximum current allowed for all the loads is 20A.

#### 12.1 PROBE CONNECTION

The probes shall be mounted with the bulb upwards to prevent damages due to casual liquid infiltration. It is recommended to place the thermostat probe away from air streams to correctly measure the average room temperature. Place the defrost termination probe among the evaporator fins in the coldest place, where most ice is formed, far from heaters or from the warmest place during defrost, to prevent premature defrost termination.

### 13. HOW TO USE THE HOT KEY

#### 13.1 HOW TO PROGRAM A HOT KEY FROM THE INSTRUMENT (UPLOAD)

1. Program one controller with the front keypad.
2. When the controller is **ON**, insert the "Hot key" and push ▲ key; the "uPL" message appears followed by a flashing "End"
3. Push "SET" key and the End will stop flashing.
4. Turn OFF the instrument remove the "Hot Key", then turn it ON again.

**NOTE:** the "Err" message is displayed for failed programming. In this case push again ▲ key if you want to restart the upload again or remove the "Hot key" to abort the operation.

#### 13.2 HOW TO PROGRAM AN INSTRUMENT USING A HOT KEY (DOWNLOAD)

1. Turn OFF the instrument.
2. Insert a programmed "Hot Key" into the 5 PIN receptacle and then turn the Controller ON.

3. Automatically the parameter list of the "Hot Key" is downloaded into the Controller memory, the "doL" message is blinking followed by flashing "End".
4. After 10 seconds the instrument will restart working with the new parameters.
5. Remove the "Hot Key".

**NOTE** the message "Err" is displayed for failed programming. In this case turn the unit off and then on if you want to restart the download again or remove the "Hot key" to abort the operation.

#### 14. ALARM SIGNALS

Message	Cause	Outputs
"P1"	Room probe failure	Compressor output acc. to par. "Con" and "COF"
"P2"	Evaporator probe failure	Defrost end is timed
"P3"	Third probe failure	Outputs unchanged
"HA"	Maximum temperature alarm	Outputs unchanged.
"LA"	Minimum temperature alarm	Outputs unchanged.
"HA2"	Condenser high temperature	It depends on the "Ac2" parameter
"LA2"	Condenser low temperature	It depends on the "bLL" parameter
"dA"	Door open	Compressor and fans restarts
"EA"	External alarm	Output unchanged.
"CA"	Serious external alarm (i1F=bAL)	All outputs OFF.
"CA"	Pressure switch alarm (i1F=PAL)	All outputs OFF
"rtc"	Real time clock alarm	Alarm output ON; Other outputs unchanged; Defrosts according to par. "IdF" Set real time clock has to be set
rtF	Real time clock board failure	Alarm output ON; Other outputs unchanged; Defrosts according to par. "IdF" Contact the service

#### 14.1 SILENCING BUZZER / ALARM RELAY OUTPUT

If "tbA = y", the buzzer and the relay are silenced by pressing any key.

If "tbA = n", only the buzzer is silenced while the alarm relay is on until the alarm condition recovers.

#### 14.2 ALARM RECOVERY

Probe alarms "P1", "P2", "P3" start some seconds after the fault in the related probe; they automatically stop some seconds after the probe restarts normal operation. Check connections before replacing the probe.

Temperature alarms "HA", "LA", "HA2" and "LA2" automatically stop as soon as the temperature returns to normal values.

Alarms "EA" and "CA" (with i1F=bAL) recover as soon as the digital input is disabled.

Alarm "CA" (with i1F=PAL) recovers only by **switching off and on** the instrument.

#### 14.3 OTHER MESSAGES

Pon	Keyboard unlocked.
PoF	Keyboard locked
noP	In programming mode: none parameter is present in Pr1 On the display or in dP2, dP3, dP4: the selected probe is nor enabled

#### 15. TECHNICAL DATA

**Housing:** self extinguishing ABS.

**Case:** facia 38x185 mm; depth 48mm

**Mounting:** panel mounting in a 150x31 mm panel cut-out with two screws.  $\varnothing$  3 x 2mm.

Distance between the holes 165mm

**Protection:** IP20; **Frontal protection:** IP65 with frontal gasket mod RG-L. (optional)

**Connections:** Screw terminal block  $\leq$  2.5 mm<sup>2</sup> heat-resistant wiring and 6,3mm Faston

**Power supply:** 230Vac or 110Vac or 24Vac  $\pm$  10%; **Power absorption:** 5VA max.

**Display:** 3 digits, red LED, 14,2 mm high; **Inputs:** Up to 3 NTC or PTC probes.

**Digital input:** 1 free voltage

**Relay outputs: Total current on loads MAX. 20A**

compressor: relay SPST 20(8) A, 250Vac

light: relay SPST 7 A, 250Vac

**Other output:** buzzer (optional)

**Serial output:** TTL standard; **Communication protocol:** Modbus - RTU

**Data storing:** on the non-volatile memory (EEPROM).

**Internal clock back-up:** 24 hours (only for model with RTC)

**Kind of action:** 1B; **Pollution grade:** 2; **Software class:** A;

**Rated impulsive voltage:** 2500V; **Over voltage Category:** II

**Operating temperature:** 0+60 °C; **Storage temperature:** -30+85 °C.

**Relative humidity:** 20+85% (no condensing)


**Measuring and regulation range: NTC probe:** -40+110°C (-40+230°F);

**PTC probe:** -50+150°C (-58+302°F)

**Resolution:** 0,1 °C or 1°C or 1 °F (selectable); **Accuracy (ambient temp. 25°C):**  $\pm$ 0,7 °C  $\pm$ 1 digit

#### 16. CONNECTIONS


##### 16.1 XW20LS – DRY CONTACTS

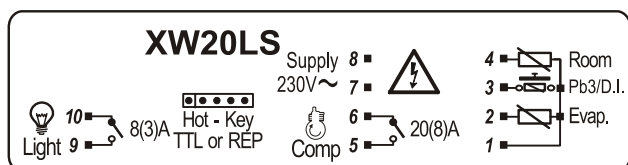

**Supply:** 120Vac or 24Vac: connect to terminals 7-8

The X-REP output is optional

##### 16.2 XW20LS – DIRECT CONNECTIONS OF LOAD

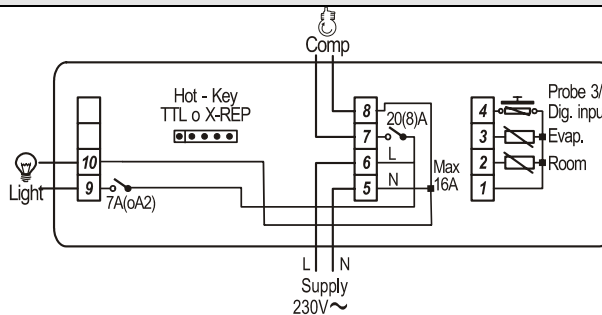

**Supply:** 120Vac or 24Vac: connect to terminals 5-6

The X-REP output is optional

#### 17. DEFAULT SETTING VALUES

Label	Name	Range	°C/°F	Level
Set	Set point	LS+US	3.0	- - -
rtc	Real time clock menu	-	-	Pr1
Hy	Differential	0,1+25,5°C / 1+ 255°F	2.0	Pr1
LS	Minimum set point	-50°C+SET/-58°F+SET	-50.0	Pr2
US	Maximum set point	SET+110°C/SET+ 230°F	110	Pr2
Ot	Thermostat probe calibration	-12+12°C /-120+120°F	0.0	Pr1
P2P	Evaporator probe presence	n=not present; Y=pres.	Y	Pr1
OE	Evaporator probe calibration	-12+12°C /-120+120°F	0	Pr2
P3P	Third probe presence	n=not present; Y=pres.	n	Pr2
O3	Third probe calibration	-12+12°C /-120+120°F	0	Pr2
OdS	Outputs delay at start up	0+255 min	0	Pr2
AC	Anti-short cycle delay	0 + 50 min	1	Pr1
rtr	P1-P2 percentage for regulation	0 + 100 (100=P1, 0=P2)	100	Pr2
CCt	Continuous cycle duration	0.0+24.0h	0.0	Pr2
CCS	Set point for continuous cycle	(-55.0+150,0°C) (-67+302°F)	3.0	Pr2
COOn	Compressor ON time with faulty probe	0 + 255 min	15	Pr2
COF	Compressor OFF time with faulty probe	0 + 255 min	30	Pr2
CH	Kind of action	dL+Ht	cL	Pr1
CF	Temperature measurement unit	°C + °F	°C	Pr2
rES	Resolution	in=integer; dE= dec.point	dE	Pr1
Lod	Probe displayed	P1;P2	P1	Pr2
rEd2	X-REP display	P1 – P2 – P3 – P4 – SET – dtr	P1	Pr2
dLY	Display temperature delay	0 + 20.0 min (10 sec.)	0.0	Pr2
dtr	P1-P2 percentage for display	1 + 99	50	Pr2
EdF*	Kind of interval for defrost	rtc +in	in	Pr2
dFP	Probe selection for defrost termination	nP; P1; P2; P3; P4	nP	Pr2
dtE	Defrost termination temperature	-50 + 50 °C	3	Pr1
IdF	Interval between defrost cycles	1 + 120 ore	8	Pr1
MdF	(Maximum) length for defrost	0 + 255 min	20	Pr1
dFd	Displaying during defrost	rt, it, SET, DEF	it	Pr2
dAd	MAX display delay after defrost	0 + 255 min	30	Pr2
ALP	Alarm probe selection	nP; P1; P2; P3; P4	P1	Pr2
ALc	Temperat. alarms configuration	rE= related to set; Ab= absolute	Ab	Pr2
ALU	MAXIMUM temperature alarm	Set+110.0°C; Set+230°F	110.0	Pr1
ALL	Minimum temperature alarm	-50.0°C+Set/-58°F+Set	-50.0	Pr1
AFH	Differential for temperat. alarm recovery	(0,1°C+25,5°C) (1°F+45°F)	2.0	Pr2
ALd	Temperature alarm delay	0 + 255 min	15	Pr2
dAO	Delay of temperature alarm at start up	0 + 23h e 50'	1.3	Pr2
AP2	Probe for temperat. alarm of condenser	nP; P1; P2; P3; P4	nP	Pr2
AL2	Condenser for low temperat. alarm	(-55 + 150°C) (-67+ 302°F)	-40	Pr2
AU2	Condenser for high temperat. alarm	(-55 + 150°C) (-67+ 302°F)	110	Pr2
AH2	Differ. for condenser temp. alar. recovery	[0,1°C + 25,5°C] [1°F + 45°F]	5	Pr2
Ad2	Condenser temperature alarm delay	0 + 254 (min.), 255=nU	15	Pr2
dA2	Delay of cond. temper. alarm at start up	0.0 + 23h 50'	1.3	Pr2
bLL	Compr. off for condenser low temper. alarm	n(0) - Y(1)	n	Pr2
AC2	Compr. off for condenser high temper alarm	n(0) - Y(1)	n	Pr2
i1P	Digital input polarity (13-14)	oP=opening; CL=closing	cL	Pr1
i1F	Digital input 1 configuration (13-14)	EAL, bAL, PAL, dor, dEF; Htr, AUS	dor	Pr1
did	Digital input alarm delay (13-14)	0+255min	15	Pr1
Nps	Number of activation of pressure switch	0 +15	15	Pr2
odc	Compress status when open door	no; Fan; CPR; F_C	F_c	Pr2
rrd	Regulation restart with door open alarm	n - Y	y	Pr2
HES	Differential for Energy Saving	(-30°C+30°C) (-54°F+54°F)	0	Pr2
Hur*	Current hour	0 + 23	-	rtc
Min*	Current minute	0 + 59	-	rtc
dAY*	Current day	Sun + SAT	-	rtc
Hd1*	First weekly holiday	Sun+ SAT – nu	nu	rtc
Hd2*	Second weekly holiday	Sun+ SAT – nu	nu	rtc
ILE*	Energy Saving cycle start during workdays	0 + 23h 50 min.	0	rtc
dLE*	Energy Saving cycle length during workdays	0 + 24h 00 min.	0	rtc
ISE*	Energy Saving cycle start on holidays	0 + 23h 50 min.	0	rtc
dSE*	Energy Saving cycle length on holidays	0 + 24h 00 min.	0	rtc
Ld1*	1st workdays defrost start	0 + 23h 50 min. - nu	6.0	rtc
Ld2*	2nd workdays defrost start	0 + 23h 50 min. - nu	13.0	rtc
Ld3*	3rd workdays defrost start	0 + 23h 50 min. - nu	21.0	rtc
Ld4*	4th workdays defrost start	0 + 23h 50 min. - nu	0.0	rtc
Ld5*	5th workdays defrost start	0 + 23h 50 min. - nu	0.0	rtc
Ld6*	6th workdays defrost start	0 + 23h 50 min. - nu	0.0	rtc

Label	Name	Range	°C/°F	Level
<b>Sd1*</b>	1 <sup>st</sup> holiday defrost start	0 ÷ 23h 50 min. - nu	6.0	rtc
<b>Sd2*</b>	2 <sup>nd</sup> holiday defrost start	0 ÷ 23h 50 min. - nu	13.0	rtc
<b>Sd3*</b>	3 <sup>rd</sup> holiday defrost start	0 ÷ 23h 50 min. - nu	21.0	rtc
<b>Sd4*</b>	4 <sup>th</sup> holiday defrost start	0 ÷ 23h 50 min. - nu	0.0	rtc
<b>Sd5*</b>	5 <sup>th</sup> holiday defrost start	0 ÷ 23h 50 min. - nu	0.0	rtc
<b>Sd6*</b>	6 <sup>th</sup> holiday defrost start	0 ÷ 23h 50 min. - nu	0.0	rtc
<b>Adr</b>	Serial address	1+247	1	Pr2
<b>PbC</b>	Kind of probe	Ptc; ntc	ntc	Pr2
<b>onF</b>	on/off key enabling	nu, oFF; ES	oFF	Pr2
<b>dP1</b>	Room probe display	--	-	Pr2
<b>dP2</b>	Evaporator probe display	--	-	Pr2
<b>dP3</b>	Third probe display	--	-	Pr2
<b>rSE</b>	Real set	actual set	-	Pr2
<b>rEL</b>	Software release	--	1.8	Pr2
<b>Ptb</b>	Map code	--		Pr2

\* Only for model with real time clock

<sup>2</sup> Only for XW20LS with X-REP output

Dixell S.p.A. Z.I. Via dell'Industria, 27  
 32010 Pieve d'Alpago (BL) ITALY  
 tel. +39 - 0437 - 98 33 - fax +39 - 0437 - 98 93 13  
 E-mail: dixell@dixell.com - <http://www.dixell.com>